

HGV2 Accessories

Application

Protection functions of duplex insulation, water proof and dust proof.

Main Technical Parameters

Auxiliary Contact

Model	Type	Installation	Contact type
HGV2-AE11	Instantaneous auxiliary contact	In the front(every breaker is one)	N/O+N/C
HGV2-AE20			N/O+N/O
HGV2-AN11		Side(left side of breaker 2, at most)	N/O+N/C
HGV2-AN20			N/O+N/O
HGV2-AD1010	Trouble signal contact + Instantaneous accessory contact	Side(3)(circuit breaker left side of 1)	N/O+N/O
HGV2-AD1001			(Trouble)+N/C
HGV2-AD0110			N/C+N/O
HGV2-AD0101			(Trouble)+N/C

Electricity release

Model	Type	Installation	Contact type
HGV2-AU115	the under-voltage release	Side(right side of breaker, one)	110.127V 50Hz
HGV2-AU225			220.240V 50Hz
HGV2-AU385			380.415V 50Hz
HGV2-AS115	Shunt release		110.127V 50Hz
HGV2-AS225			220.240V 50Hz
HGV2-AS385			380.415V 50Hz

Waterproof Motor Breaker Enclosure

Application	Type	The outer cover protects the degree	Model
Use for motor circuit breaker with or without accessory (on the right or on the left of HGV2 it can install one accessory)	surface installation, insulating, seal covering,	IP41	HGV2-MC01
	Protect the electric conduction part	IP55	HGV2-MC02

